

## BLACK TIE TOYS FUSE BOARD

- Turn off the machine and unplug the power cord.
- Open the access door located to the right of the coin door.
- Slide the component tray out as far as possible without placing undue strain on wiring.
- Locate JP1 in the upper left corner of the main PCB. Fig. 1



fig. 1

- Remove the 24-pin connector from JP1 and insert the 24-pin connector attached to the fuse board. *Route the wiring under existing wiring to avoid difficulty replacing tray.*
- Position the fuse board below the main PCB taking care not to block access to board connectors. Fig. 2

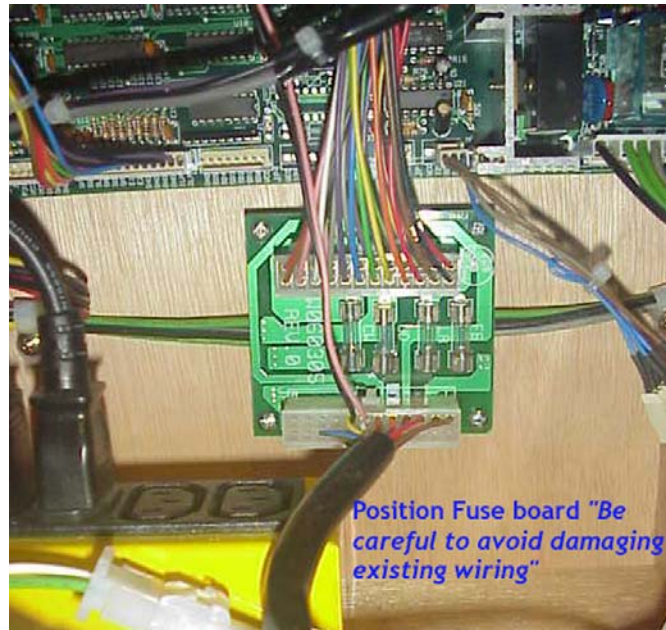


fig. 2

- Using the four #6X1" screws and ½" Standoffs (*Not using standoffs may damage underlying wiring!*) Mount the Fuse board so that existing components are not damaged or blocked. Fig 3



fig. 3

- Slide component tray back into place, re-secure access door, and power up the machine. This completes the upgrade.